


EPSON®


Home Projector

EH-TW750
EH-TW740
EH-TW710




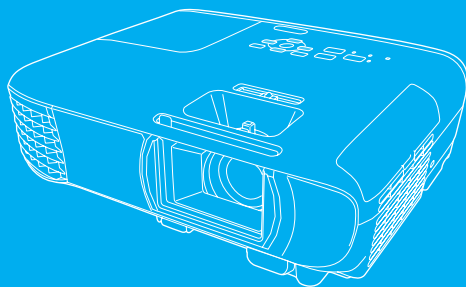


EN	Quick Start Guide	LV	Ātrās darba uzsākšanas pamācība
DE	Kurzanleitung	EL	Οδηγός γρήγορης εκκίνησης
FR	Guide de démarrage rapide	TR	Hızlı Başlangıç Kılavuzu
IT	Guida di avvio rapido	SL	Priročnik za hitri zagon
ES	Guía de inicio rápido	HR	Kratke upute
PT	Guia de Referência Rápida	MK	Прирачник брз почеток
NL	Introductiehandleiding	SR	Uputstvo za brz početak
DA	Introduktion	CA	Guia d'inici ràpid
FI	Pika-aloitusopas	RU	Руководство по быстрой установке
NO	Hurtigveiledning	UK	Коротка інструкція "Початок роботи"
SV	Snabbstartsguide	KK	Қысқа іске қосу нұсқаулығы
CS	Úvodní příručka	KO	빠른 시작 가이드
HU	Bevezetés	ID	Panduan Ringkas
PL	Przewodnik szybkiego startu	VN	Hướng dẫn khởi động nhanh
SK	Stručná příručka	AR	دليل البداية السريعة
BG	Ръководство за бърз старт	FA	راهنمای سریع برای شروع بکار
RO	Ghid de pornire rapidă	ZHS	設定手册
ET	Lühijuhend	ZHT	設定説明書
LT	Trumpas pradžios vadovas		

1




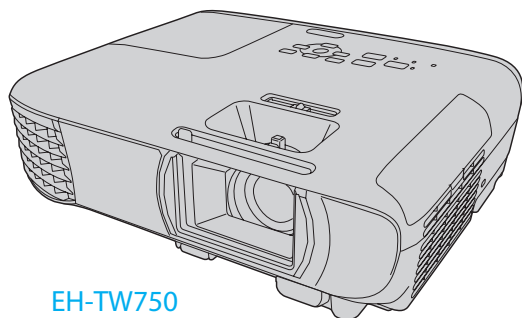


EH-TW750

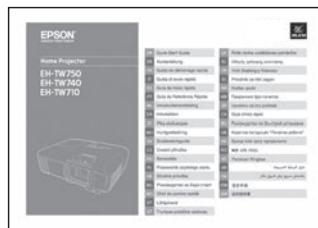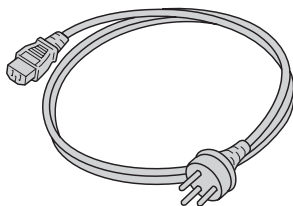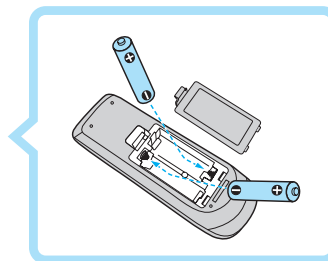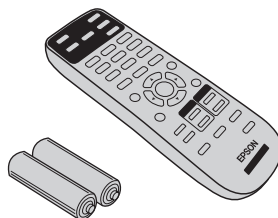


The following item is not included with all projector models.




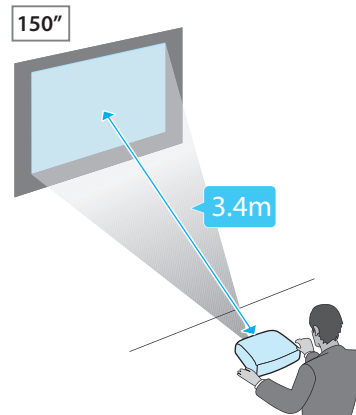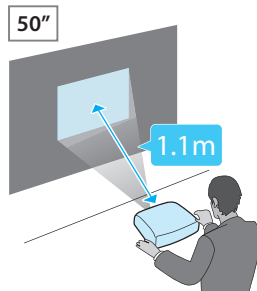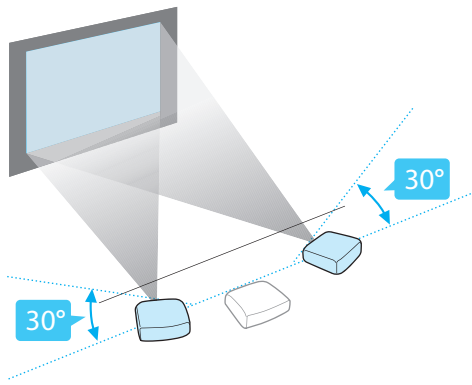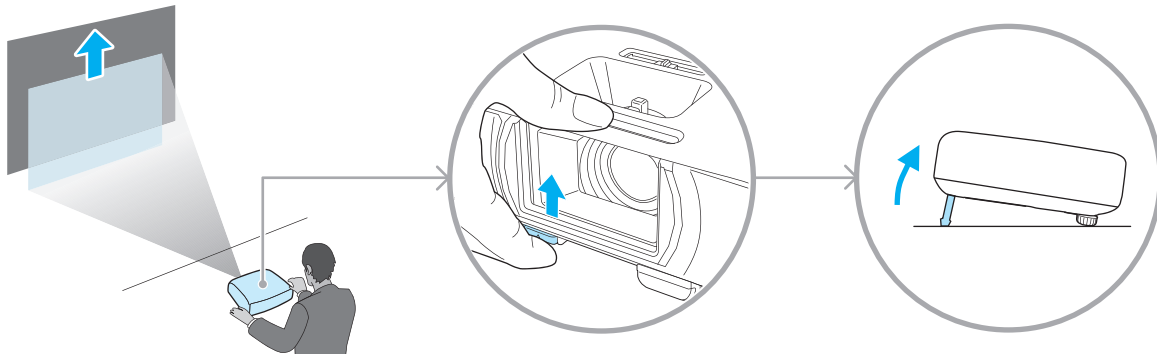


3

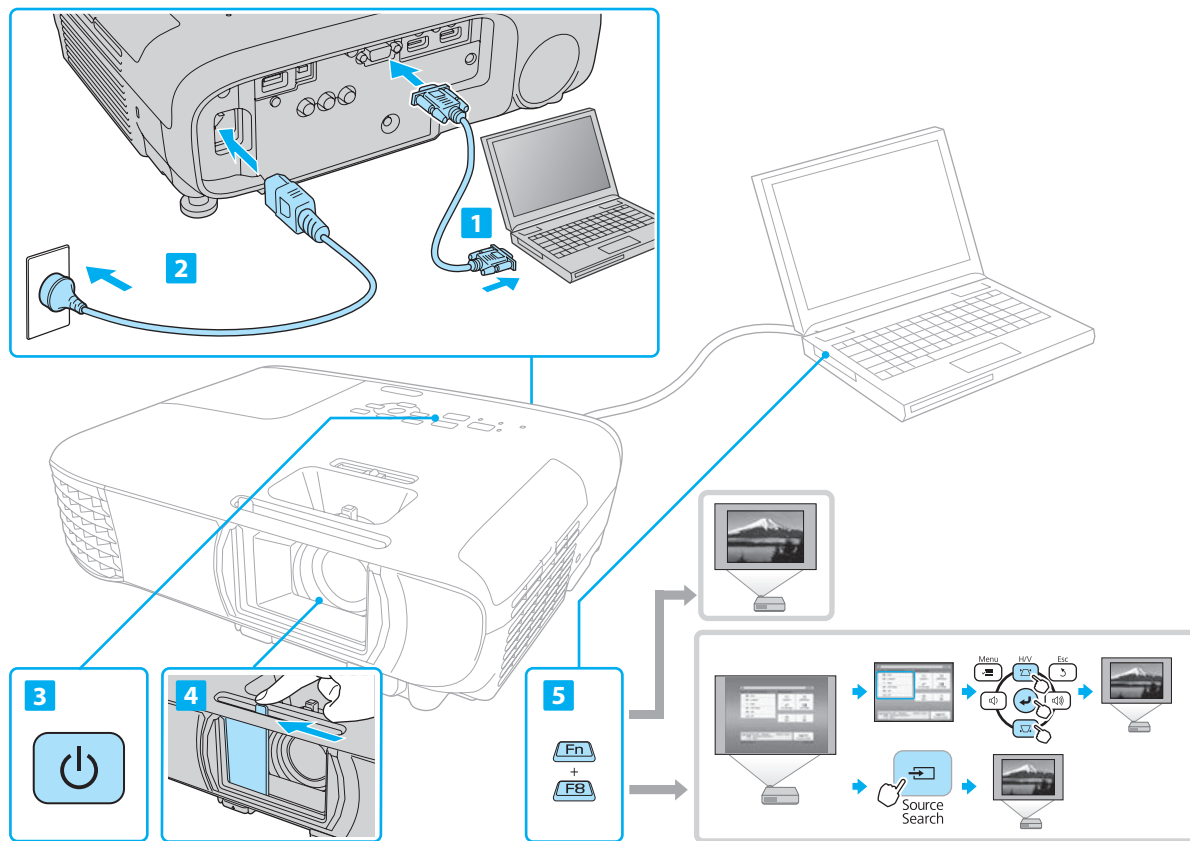

EH-TW750/EH-TW710

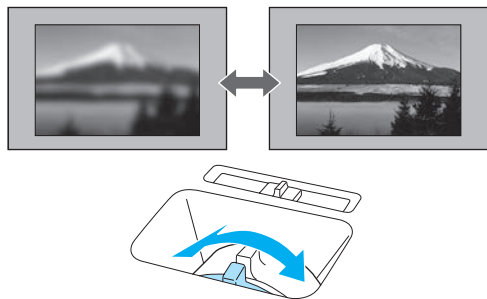


EH-TW740

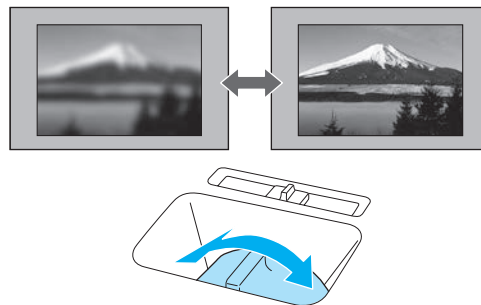




4

EH-TW750/EH-TW710


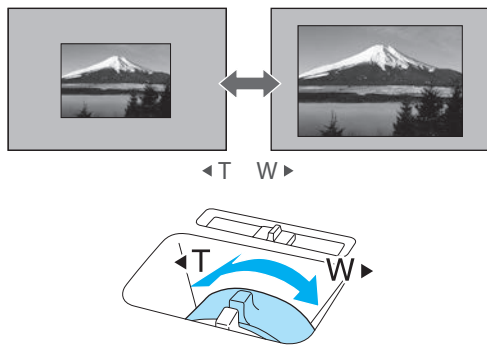


EH-TW740


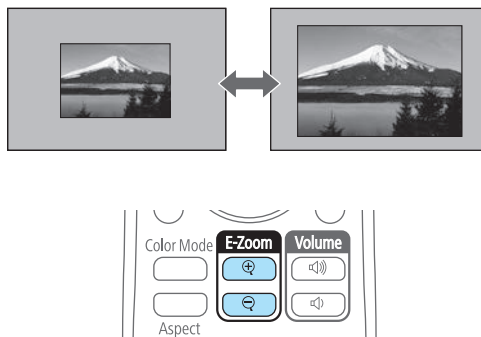


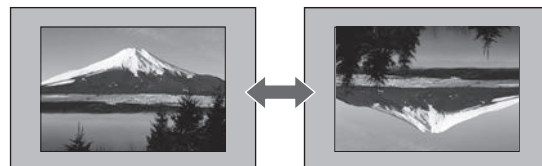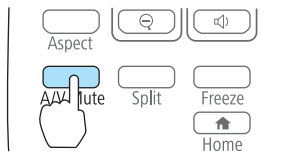



5

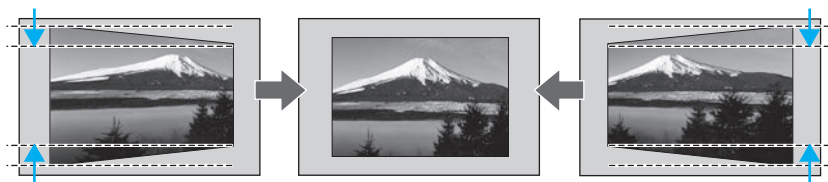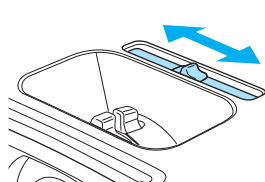

1

 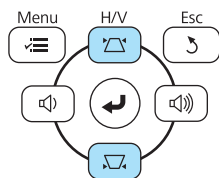


2

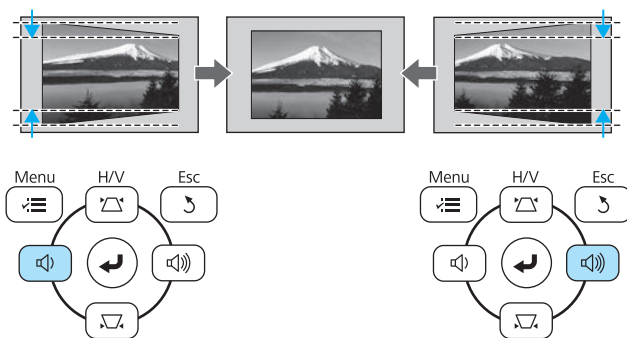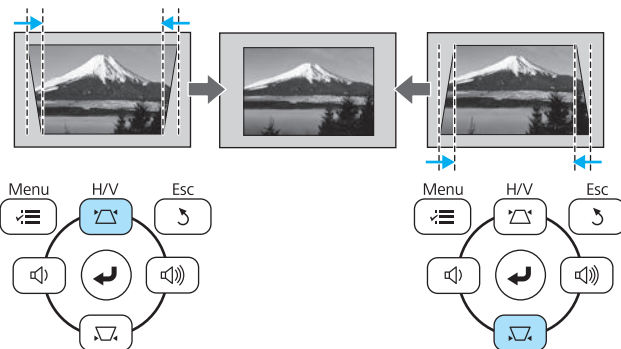

EH-TW750/EH-TW710

7

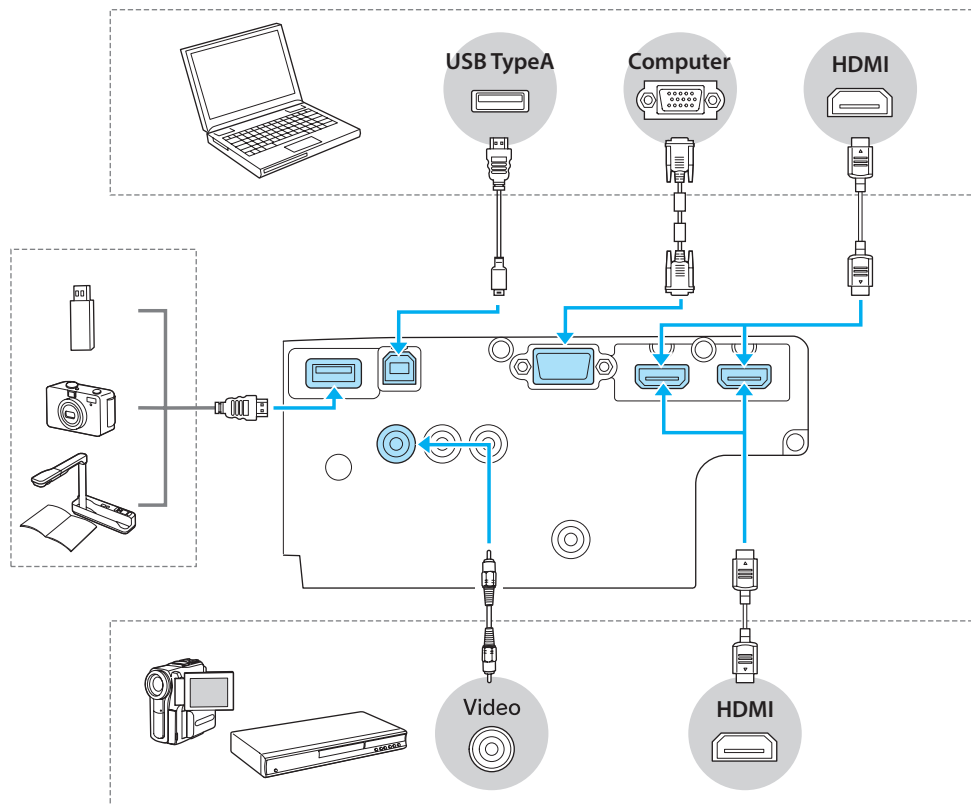

EH-TW740

